

How to Get the Phone IP

In this guide we will learn how to get the IPv4 of the Phone.

Please Find Your Phone model below.

| Phone Model | Instructions for getting the IP Address |
|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Yealink T21P Yealink T46 Yealink T48 Yealink T46 Yealink T48 Yealink T54W | Press OK on the phone. The IP address should be shown on the first line labeled IPv4 . |
| Yealink CP925 Yealink CP965 Yealink T57W Yealink T58 Yealink VP5 | <ol style="list-style-type: none">1. Press the Menu icon, then select Status.2. The IP address should be shown on the first line labeled IPv4. |
| Yealink W52P Yealink W56P Yealink W60P Yealink W69P Yealink W76P Yealink W79P | <ol style="list-style-type: none">1. Pick up one of the handsets registered to the base station, then press OK.2. Navigate to Status > Base.3. The IP address of the Base will be displayed on the screen. |
| Yealink T58W Yealink VP59 | <ol style="list-style-type: none">1. Press the settings icon, then select Status.2. The IP address should be shown on the first line labeled IPv4. |
| Yealink CP965 Yealink CP925 | <ol style="list-style-type: none">1. Press the settings icon, then select Status.2. The IP address should be shown on the first line labeled IPv4. |

Revision #1

Created 18 October 2022 21:06:41 by Aniel

Updated 18 October 2022 21:06:41 by Aniel