

# How to Get the Phone IP

In this guide we will learn how to get the IPv4 of the Phone.

Please Find Your Phone model below.

Phone Model	Instructions for getting the IP Address
Yealink T21P Yealink T46 Yealink T48 Yealink T46 Yealink T48 Yealink T54W	Press <b>OK</b> on the phone. The IP address should be shown on the first line labeled <b>IPv4</b> .
Yealink CP925 Yealink CP965 Yealink T57W Yealink T58 Yealink VP5	<ol style="list-style-type: none"><li>1. Press the <b>Menu</b> icon, then select <b>Status</b>.</li><li>2. The IP address should be shown on the first line labeled IPv4.</li></ol>
Yealink W52P Yealink W56P Yealink W60P Yealink W69P Yealink W76P Yealink W79P	<ol style="list-style-type: none"><li>1. Pick up one of the handsets registered to the base station, then press <b>OK</b>.</li><li>2. Navigate to <b>Status &gt; Base</b>.</li><li>3. The IP address of the Base will be displayed on the screen.</li></ol>
Yealink T58W Yealink VP59	<ol style="list-style-type: none"><li>1. Press the settings icon, then select <b>Status</b>.</li><li>2. The IP address should be shown on the first line labeled IPv4.</li></ol>
Yealink CP965 Yealink CP925	<ol style="list-style-type: none"><li>1. Press the settings icon, then select <b>Status</b>.</li><li>2. The IP address should be shown on the first line labeled IPv4.</li></ol>

---

Revision #1

Created 18 October 2022 21:06:41 by Aniel

Updated 18 October 2022 21:06:41 by Aniel